

Appliance Descaler Kettle











- Fast acting
- 🧭 Safe on stainless steel
- Taint free





Always Wear Correct PPE Check Safety Data Sheet

Hazardous Pictograms





Place appropriate cleaning signs



Fill the kettle to two thirds with warm water & add 150mls of the C18 descaler



Leave for a minimum of 4 hours or until the fizzing stops




Empty the kettle and thoroughly rinse with fresh water at least three times



Refill the kettle and boil



Empty the kettle and rinse one more time

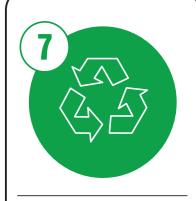

Empty – Rinse – Recycle









