

Appliance Descaler (Kettle)



- ✓ Fast acting
- ✓ Safe on stainless steel



**Always Wear
Correct PPE
Check Safety
Data Sheet**

Hazardous Pictograms



Place appropriate
cleaning signs



Fill the kettle to two
thirds with warm
water & add 150mls
of the C18 descaler



Leave for a minimum
of 4 hours or until
the fizzing stops




Empty the kettle
and thoroughly
rinse with fresh
water at least
three times



Refill the kettle
and boil



Empty the
kettle and rinse
one more time

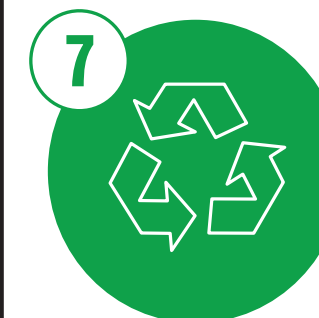

Empty – Rinse –
Recycle

