



- ✓ Fast acting
- ✓ Safe on stainless steel
- ✓ Taint free



**Always Wear  
Correct PPE  
Check Safety  
Data Sheet**

## Hazardous Pictograms



Place appropriate  
cleaning signs



Add 50mls of C18 to  
250mls warm water  
into a suitable  
container




Submerge the shower  
head and allow  
sufficient contact  
time



Inspect periodically  
until all scale has  
been removed



Rinse the shower  
head & the container  
thoroughly

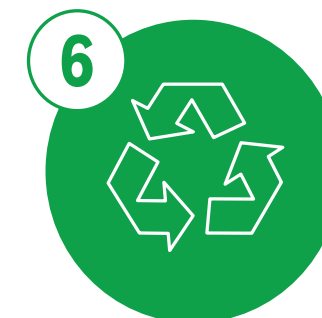

Empty – Rinse –  
Recycle